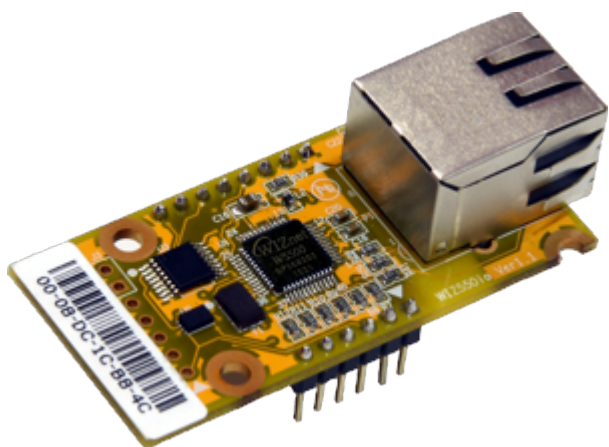# WIZ550io

Overview

WIZ550io is an auto configurable Ethernet controller that includes a W5500 (TCP/IP hardwired chip and PHY embedded), a transformer and RJ45.

It has a unique real MAC address and configures the network setting automatically. When powered on, WIZ550io initializes itself ⋯ with embedded real MAC and sets the default IP address (192.168.1.2) and it can be pinged. Therefore, users are not required to write MAC and network information like IP address, Subnet mask and Gateway address. The WIZ550io is an ideal product for users who want to develop their Internet enabling systems rapidly.

For more information on the W5500 chip inside the WIZ550io module please also refer to the chip's datasheet:

Datasheet History

Version	Date	Description
1.0.0	2013-08-01	Initial Release

北京博控自动化技术有限公司

☎ 010-51663110
www.bocon.com.cn

1.0.1	2013-09-13	Corrected duplicated statements and typing errors (P.14, 23, 24, 28, 39, 51) Corrected descriptions (P.35)
1.0.2	2013-11-14	Changed "descriptions of pin at 1.1 Pin Descriptions"(P.10) starting "It must be tied to GND to NC (PIN38..42)" / 2. corrected typing error: starting "0x02 to 0x42 value of SOCK_MACRAW at 4.2 Socket Registers(P.50)"

Hardware Pins of WIZ550io

Pin Map

北京博控自动化技术有限公司

☎ 010-51663110
www.bocon.com.cn
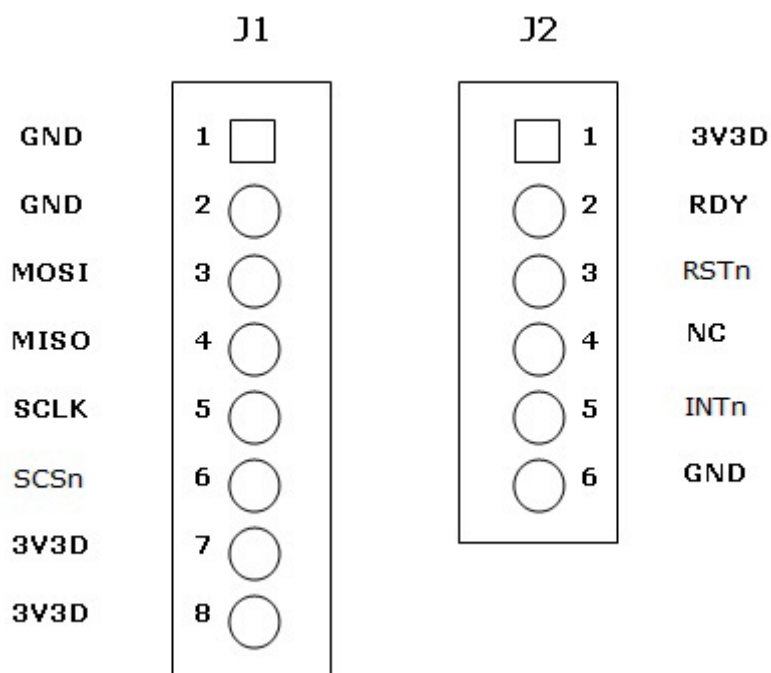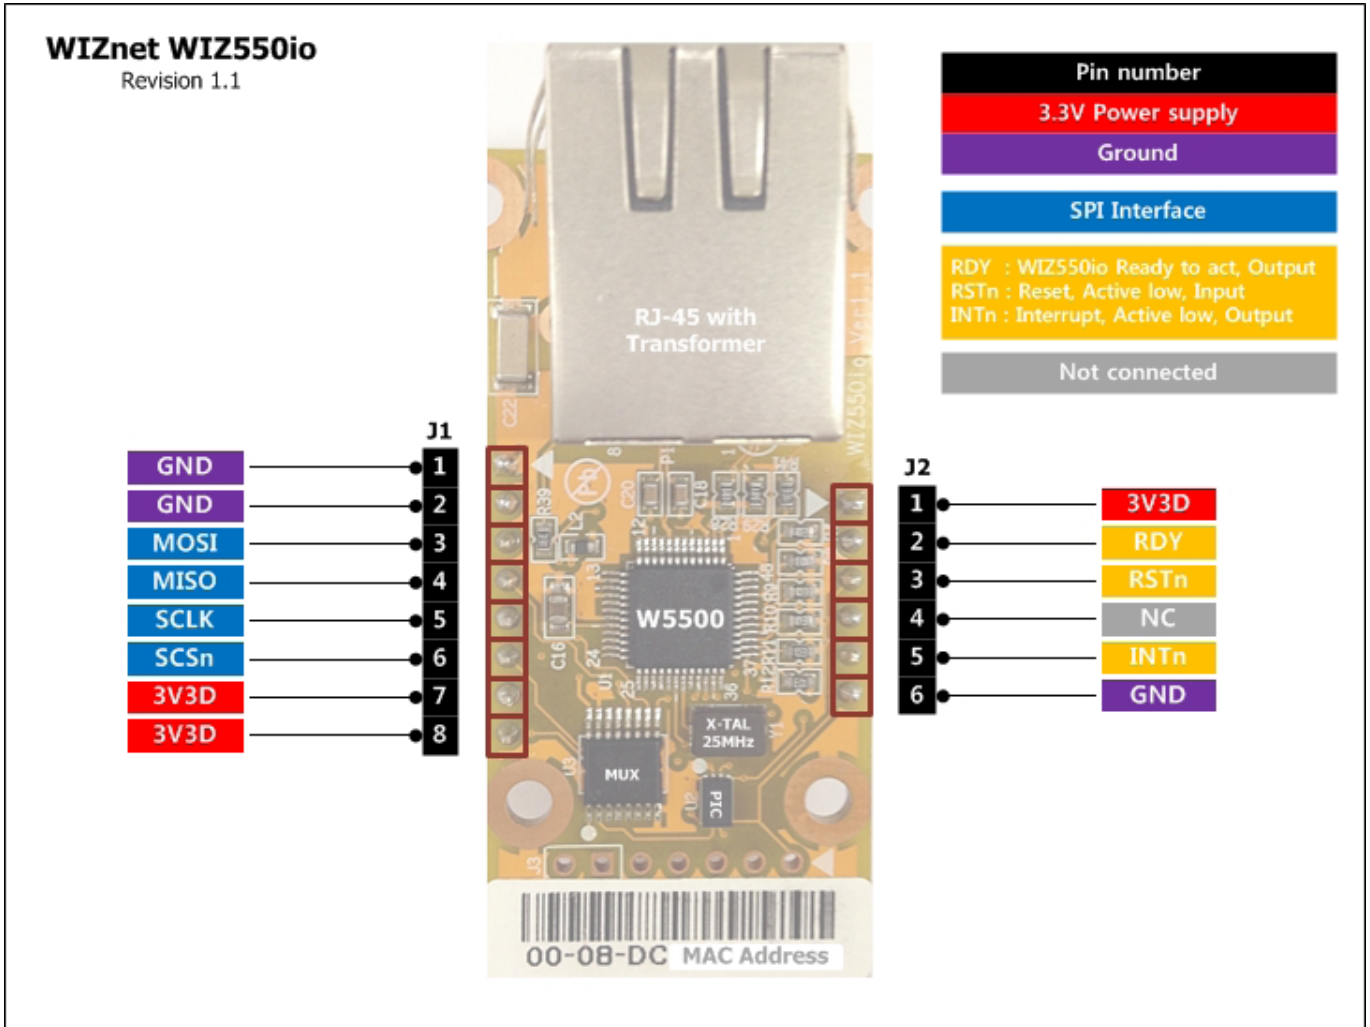
Pin Description

Pin No.		I/O	Pin Name	Description
J1	1	P	GND	Ground
	2	P	GND	Ground
	3	I	MOSI	SPI Master Out Slave In This pin is used for SPI MOSI signal pin
	4	O	MISO	SPI Master In Slave Out This pin is used for SPI MISO signal pin
	5	I	SCLK	SPI Clock This pin is used for SPI Clock Signal pin
	6	I	SCSn	SPI Slave Select This pin is used for SPI Slave Select Signal Pin when using SPI interface
	7	P	3V3D	Power : 3.3V Power Supply
	8	P	3V3D	Power : 3.3V Power Supply
Pin No.		I/O	Pin Name	Description

北京博控自动化技术有限公司　　　　　　　　　　　　☎ 010-51663110
www.bocon.com.cn

J2	1	P	3V3D	Power : 3.3V Power Supply
	2	O	RDY	READY This pin is asserted to low after power on. When RSTn is activated, WIZ550io does auto configuration with embedded MAC and default IP address. After configuration gets completed, WIZ550io raises this pin to HIGH in order to inform about the completion of WIZ550io′s configuration. Host processor can only control WIZ55oio when RDY pin is HIGH.
	3	I	RSTn	Reset : Low activity This pin is to initialize WIZ550io. Hold at least 500us after asserted to LOW and wait for at least 150ms after it is changed to HIGH until WIY550io configured itself.
	4	I	NC	Not Connected
	5	O	INTn	Interrupt : Low activity This pin indicates that W5500 inside WIZ550io requires MCU's due to events like socket connection, disconnection, data receiving timeout and WOL (Wake on Lan). The interrupt is cleared by writing IR register or Sn_IR. All interrupts are maskable.
	6	P	GND	Ground

Caution)
Some users may want to reinitialize W5500 inside WIZ550io with SW reset, not handling RSTn pin. It will make WIZ550io hang up due to clearance of all information in the registers of W5500. A tiny MCU inside WIZ550io initializes W5500 with embedded MAC address and a default IP address and Initialization is triggered by RSTn.

In case of SW reset, all registers in W5500 will be cleared and WIZ550io will not initialize itself. All information inside WIZ550io will be lost and WIZ550io will hang up instead.

Therefore, we recommend HW reset instead of SW reset. Nevertheless, if users want to use SW reset, we recommend to save MAC address and network information including IP address, Subnet mask and Gateway address before SW reset, and writing those information to WIZ550io after SW reset.

SPI Operations

There is a W5500 inside WIZ550io. Therefore SPI operation of WIZ550io follows one of W5500. For more information about SPI operation of WIZ550io, please refer to W5500 Datasheet.

Datasheet History

| Version	Date	Description
1.0.0	2013-08-01	Initial Release
1.0.1	2013-09-13	Corrected duplicated statements and typing errors (P.14, 23, 24, 28, 39, 51) Corrected descriptions (P.35)
1.0.2	2013-11-14	Changed ″descriptions of pin at 1.1 Pin Descriptions″(P.10) starting ″ It must be tied to GND to NC (PIN38..42)″ / 2. corrected typing error: starting ″0x02 to 0x42 value of SOCK_MACRAW at 4.2 Socket Registers(P.50)″

Timing Diagram

Reset Timing
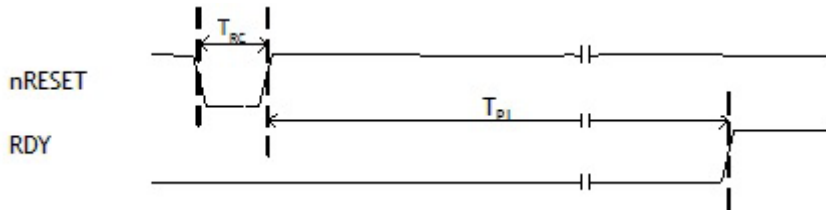
Symbol	Description	Min	Max
TRC	Reset Cycle Time	500us	-
TPL	Internal Auto Configuration Time	-	50ms

SPI Timing

北京博控自动化技术有限公司

☎ 010-51663110
www.bocon.com.cn
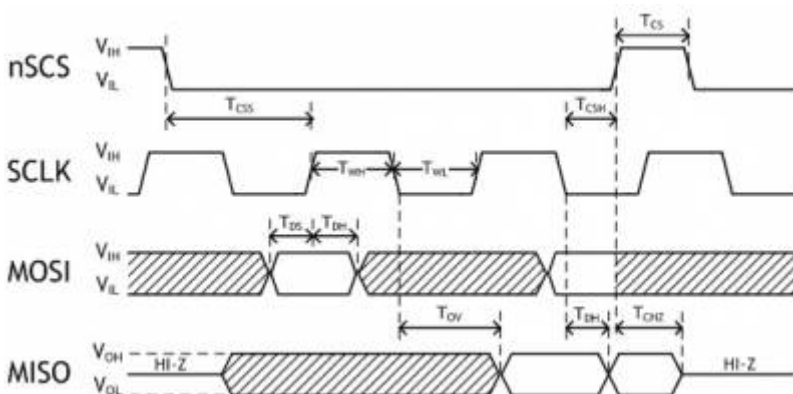
Symbol	Description	Min	Max	Units
Fsck	SCLK Clock Frequency	-	80	MHz
TWH	SCLK High duration	6	-	ns
TWL	SCLK Low duration	6	-	ns
TCS	nSCS High duration	5	-	ns

Block Diagram
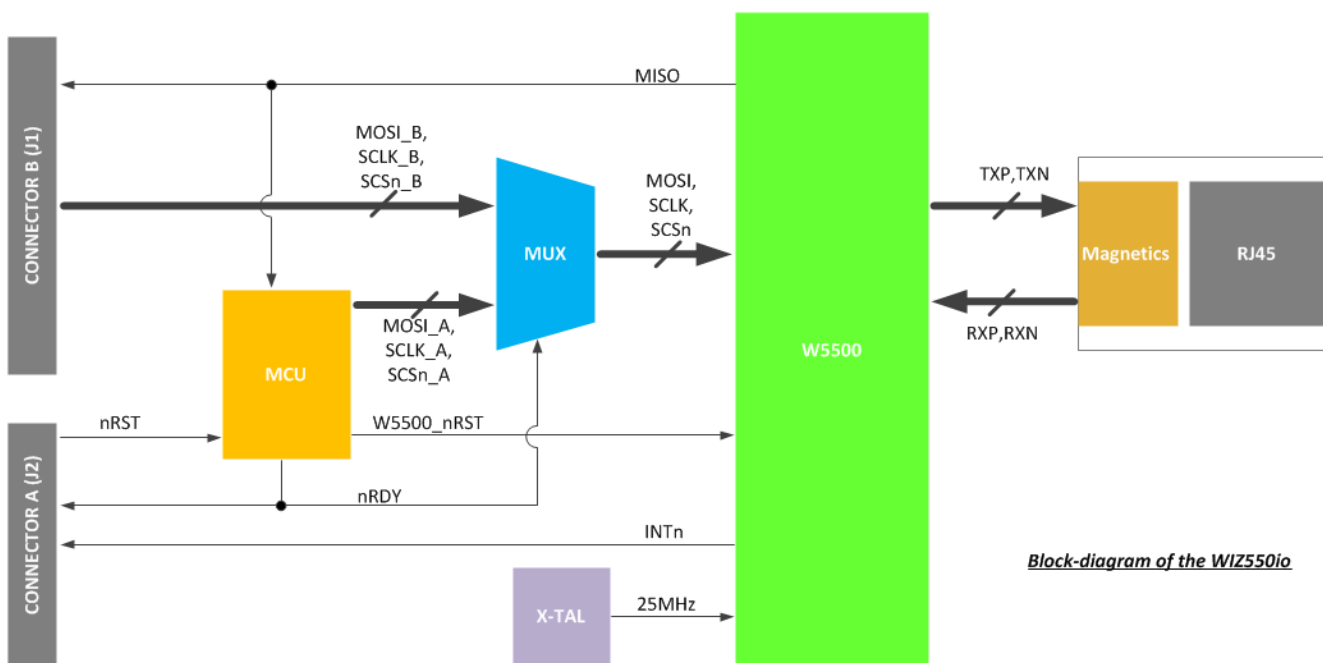
Block-diagram of the WIZ550io

Schematic

WIZ550io Rev1.1 Schematic

BOM

V1.1

2014/02/07 15:38 ·

Dimension

WIZ550io Ver1.0

北京博控自动化技术有限公司

☎ 010-51663110
www.bocon.com.cn

WIZ550io Ver1.1

北京博控自动化技术有限公司

☎ 010-51663110
www.bocon.com.cn